

# **DELTA**

# Portable XRF Analyzers DELTA Handheld X-ray Fluorescence



Fast, Accurate, Nondestructive Elemental Analysis of Materials

# The DELTA Handheld XRF for Elemental Analysis

Nondestructive DELTA handheld X-ray fluorescence analyzers provide decisive results to multiple industries with varied applications. Elements such as lead, mercury, arsenic, copper, gold, silver, platinum, and more are detectable in concentrations of parts per million (PPM) up to 100%, with little or no sample preparation requirements.

The new generation DELTA handheld XRF analyzers are ergonomically advanced with a forward looking design incorporating the latest in electronics, components, and software technology. The DELTA X-act Count technology can provide even better sensitivity and precision in faster time for more materials than before.

### **Scrap Sorting and Recycling**

The DELTA scrap sorting handheld XRF provides reliable identification in 1 to 2 seconds for most alloy grades and pure metals. It is designed for durability — to withstand the toughest environments. It is ideal for checking a wide variety of materials including ferrous and non-ferrous metals, glass, and plastics in seconds.



# Alloy Positive Material Identification/QA/QC

The DELTA analytical and positive material inspection (PMI) analyzer is vital for quality control and assurance in the metal manufacturing and fabrication industries. It is used for compositional analysis and alloy grade identification, from critical components to raw materials to welds.



# **Jewelry/Precious Metals Identification**

The DELTA provides fast, accurate alloy chemistry and karat classification with one nondestructive, non-intrusive test. Whether importing precious metals, selling or producing jewelry, or processing scrap metal, the DELTA is the ideal choice.



# **Regulatory and Safety Screening**

The DELTA screens for pollutants and poisons such as lead, cadmium, chromium, mercury, arsenic and other toxic elements. It is used to help ensure safety and to help comply with global regulatory programs directed by the EPA, RoHS/WEEE EU Member States' Enforcement Bodies, CPSC, FDA, Border Patrol, and more.



# **Geochemistry and Mining Exploration**

The DELTA provides immediate results to help determine the next course of action throughout the entire mining process — exploration, grade/process control, and environmental sustainability. On-site detection of metals, minerals & contaminants, and GPS-GIS XRF for instant metal mapping ensures time and cost savings.



### **Research and Education**

The DELTA adds an amazing dimension to research and education in the classroom and in the field. Its versatility and rapid response engage students, making the periodic table of elements and science come alive. Environmental, forensics, archaeology, and chemistry education benefit immediately.



# X-ray Fluorescence Technology


Thousands of units are in use worldwide, from show rooms and assembly lines to remote desert and arctic regions. DELTA handheld XRF analyzers are optimized to be responsive and effective to meet the needs of both economically and regulatory-driven businesses, from recycling, mining, and fabrication to environmental assessment and consumer product safety, and to scientific research and education.

The DELTA series analyzers are configured with powerful miniature X-ray tubes, Si-PIN detectors or highly advanced silicon drift detectors (SDD), specialized filters, and multibeam optimization for the ultimate in XRF field analysis. The DELTA's real overall value is to help make decisions in real time with minimal reliance on off-site laboratory testing.

### **DELTA Handheld XRF Configuration**



# **XRF for Composition Analysis**

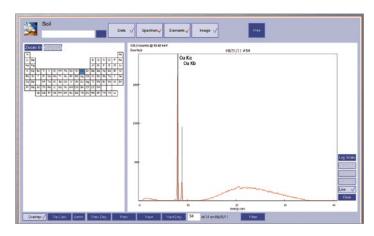

The energies (keV) at which the peaks appear identify the elements present in a material. The intensities (counts/s) of peaks correlate with the concentrations of the elements present in the material.

# **XRF Portable Workstation**



The DELTA workstation with integrated safety-lock shielding can be controlled with a PC.

# The DELTA Handheld XRF Provides Fast, Decisive Results

### Alloy ID and Scrap Sorting



The DELTA can take results and compare them to a library of alloy compositions to "match" an unknown material to known alloys. Pop up messages can be preprogrammed for immediate sorting or coding instructions to increase efficiency and throughput.



Grade Match Messaging in real time



Popup Grade Match Messaging at end of test

### **Jewelry/Precious Metals ID**



The DELTA can automatically identify and characterize a wide range of alloys, including precious metals such as Au, Ag, Pt, and Pd. It can be preprogrammed to provide on-the-spot gold karat classification, 0-24 kt.



Automatic Karat determination



Camera and collimator view of sample


# **Regulatory and Safety Screening**



The DELTA can provide positive/negative or pass/fail results for rapid regulatory and safety screening of Pb, Cd, As, Hg, Cr, and other toxic metals in consumer products. Archived DELTA images and results make it the ideal tool for a Reasonable Testing Program.



Positive/Negative results screen

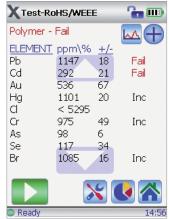


Pass/Fail and composition screen

### DELTA Handheld XRF for Overall Value

### **Geochemistry and Mining Exploration**



The DELTA metal and light element compositional results can be transferred wirelessly for XRF-GPS-GIS "instant geochemistry". It provides the ability to map, visualize, assess, and follow up on targets immediately for better mining exploration decision making.

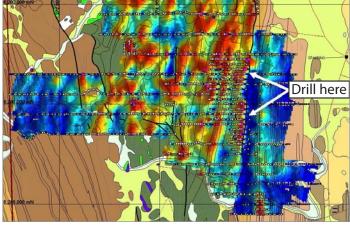


Instant geochemistry for exploration drilling

### **Environmental Assessments**



The DEws, assessments, property evaluations, and contamination tracking.

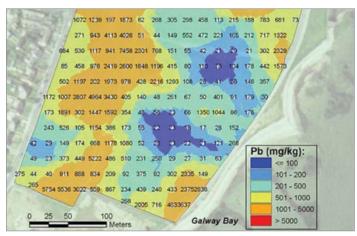


Instant metal mapping for site characterizations


### **Research and Education**



The DELTA can provide qualitative and semi-quantitative elemental information to guide research and identification of unknown or complex materials. It can provide results fast and relevant enough to keep students engaged in applicable science-based projects.

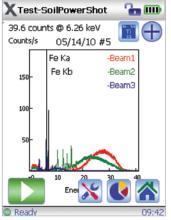

Qualitative Analysis for Elemental ID

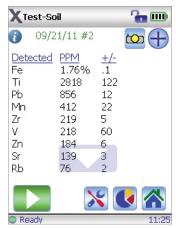

Semi-Quantitative analysis of composition

# The DELTA Series

# Everything You Need in Handheld XRF with State-of-the-Art Innovation

The DELTA handheld XRF analyzers are ergonomically advanced with a forward looking design incorporating the latest in electronics, components, and software technology.

The DELTA X-act Count technology can provide even better sensitivity and precision in faster time for more materials than before. Throughput is increased with the same or better precision in half the time for most elements.

### **Features and Benefits**


- Powerful 4 W X-ray tube for optimum element excitation
- Tight geometry for exceptional LODs and fast analysis
- Lightning-fast data acquisition for faster testing time
- Floating Point Processor: provides more calculations in less time, and leverages more advanced calibration algorithms
- Integrated Bluetooth® for data input and output available in most countries
- Analysis indicator lights visible from 360° to help ensure safe use
- Advanced colortouch LCD screen for clarity, brightness, responsiveness, and energy efficiency for indoor/outdoor use
- Accelerometer technology puts the unit into sleep mode to save energy when not in use; logs impacts for tool management
- DELTA PC software for enhanced data analysis, calibration modeling, and optional closed beam workstation operation
- USB interface port for high-speed downloads and seamless PC control
- Ergonomic rubberized handle for enhanced grip
- Hot Swap batteries to maximize uptime and productivity





The unique DELTA Docking Station frees you from having to power down the analyzer. The station charges the analyzer battery and a spare, and performs periodic calibration checks. DELTAs can be operated 24/7 in the field with hot swap battery replacement\*.

\*Available for DELTA Professional and Classic Plus.

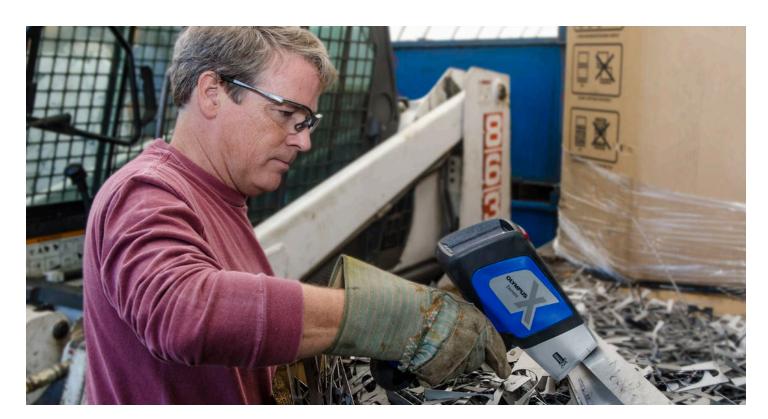

# Optional DELTA Accessories

A variety of accessories and options are available to take full advantage of the DELTA handheld XRF in the field. From portable bench-top setups for prepped samples to XRF-GPS-GIS setups for full-scale, large area, in-situ instant metal mapping, these accessories help maximize efficiency of field XRF testing.















DELTA accessories and options on this page are optional and can be coupled with an initial purchase or at any time after.



### 1. DELTA Portable Workstation

Portable workstation with integrated safety-lock and shielding is convenient for bagged, prepped, filters, dust wipes and liquid samples or for multiple small objects; a PC is connected for remote control of this closed-beam DELTA set-up.

#### 2. DELTA Holster

The holster keeps the DELTA by your side and within easy reach.

#### 3. DELTA Soil Foot

The soil foot provides hands-free analysis with the DELTA for long testing times.

#### 4. DELTA FlexStand

Lightweight mobile test stand with shielded sample chamber for testing small samples, sample cups and bagged samples.

### 5. DELTA 50 kV Probe Shield

The safety shield provides additional shielding from open beam radiation for field use of the full 50 kV power.

### 6. DELTA Soil Stick

The soil stick minimizes wear and tear on your back and knees and provides push button operation of the DELTA from an adjustable height. It's most applicable for in-situ testing on large scale soil geochemistry and environmental programs.

### 7. DELTA Xplorer

The Delta XRF-GPS-GIS Xplorer Configuration provides seamless connectivity between XRF and GIS for rapid targeting and real-time decision making.

# **DELTA Series**



# **DELTA Premium**

The DELTA Premium is equipped with powerful performance to handle the most analytically demanding applications.



# **DELTA**Professional

The DELTA Professional provides the best value solution with superior performance in speed, LODs, and elemental range.



# **DELTA Classic Plus**

The DELTA Classic Plus provides quick ID, screening, sorting, and elemental metals analysis for a large variety of applications.



# **DELTA Element**

The DELTA Element is the entry-level DELTA, built for economy and fast ROI for basic alloy identification and metals analysis.

# **DELTA Comparison\***

DELTA Premium	DELTA Professional	DELTA Classic Plus	DELTA Element
4W Rh, Au, or Ta anode (per application) X-ray tube	4W Ag, Rh, Au, or Ta anode (per application) X-ray tube	4W Au or Ta anode X-ray tube	4W Au anode X-ray tube
Large-Area Silicon Drift Detector	Silicon Drift Detector	Si-PIN Diode Detector	
Alloy and Mining: Mg and up for Rh/Ag and Al and up for Ta/Au; Soil: P and higher		Alloy and Mining: Ti and higher; Soil: P and higher	Alloy: Ti and higher

Weight: 1.5 kg (3.25 lbs) without battery

Dimensions:  $260 \times 240 \times 90 \text{ mm} (10.25 \times 9.5 \times 3.5 \text{ in.})$ 

Environmental Temperature Range: -10 °C to 50 °C (14 °F to 122 °F)

Processing Electronics: 530 MHz CPU with integrated FPU with 128 MB RAM; Proprietary Olympus Digital Pulse Processor (DPP)

Power: Rechargeable Li-ion battery; Hot-swap maintains analyzer power during battery charge

Data Display: 32 bit Color QVGA resolution, Blanview transmissive backlit touch screen; 57 x 73 mm (2.25 x 2.9 in.)

Data Storage: 1 GB microSD (stores ~75,000 readings)

Data Transfer: USB, Bluetooth®

#### Standard Accessories\*

- Carrying Case
- Li-ion Battery
- Electronic User Manual and User Interface Guide and Printed Quick Start Guide
- Battery Charger
- Mini USB Cable
- 316 Stainless Steel Calibration Check Reference Coin
- Ten (10) Spare Windows

- Integrated Wrist Strap
- DELTA PC Software
- Factory Authorized Training & Support

OLYMPUS SCIENTIFIC SOLUTIONS AMERICAS CORP. is certified to ISO 9001, ISO 14001, and OHSAS 18001.

"All specifications are subject to change without notice.
All brands are trademarks or registered trademarks of their respective owners and third party entities.
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Olympus Corporation is under license.
Copyright © 2015 by Olympus.

www.olympus-ims.com



OLYMPUS SCIENTIFIC SOLUTIONS AMERICAS CORP.

48 Woerd Avenue, Waltham, MA 02453, USA, Tel.: (1) 781-419-3900 12569 Gulf Freeway, Houston, TX 77034, USA, Tel.: (1) 281-922-9300

